


82008 • Standing Pull Back

INSTALLATION MANUAL

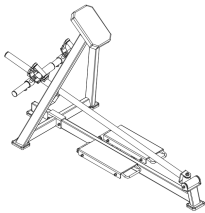

Before Installation

Before You Start

- 01
- Read all instructions before installation. Check all parts and quantities against the parts list. Contact after-sales service immediately if any part is missing or damaged in transit.
- 02
- Assemble the equipment according to the instructions. After assembly, understand all functions before use. Stop using the equipment immediately if a problem occurs. Check the instructions and contact after-sales service if the problem cannot be resolved.

Tools Required

- Rubber Mallet


• Spirit Level

• Hex Keys
- Snap-Ring Pliers

• Adjustable Wrench

• 2 People


Assembly

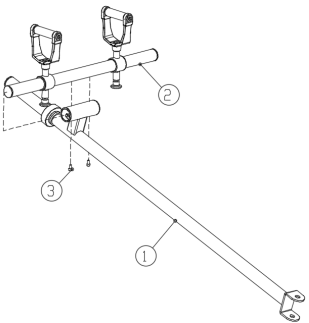

STEP 1

ACTION
Fasten the pull handle assembly (#2) to the pull-back lever arm (#1) with the listed screws.

- HARDWARE**
 - Socket Head Cap Screw M8×15 (#3) × 2

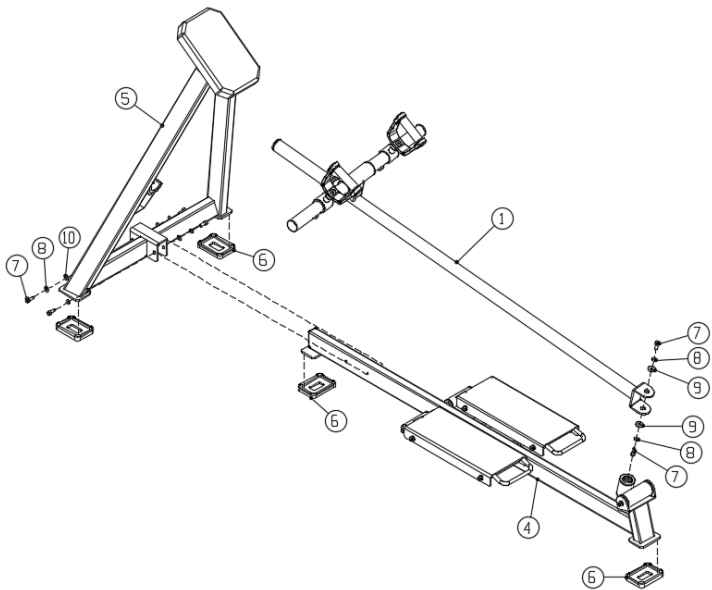

STEP 2, 3, 4 & 5

STEP 2
Fasten the front upright assembly (#5) to the base frame assembly (#4) with the listed hardware.

- HARDWARE**
 - Socket Head Cap Screw M10×25 (#7) × 4
 - Spring Washer M10 (#8) × 4
 - Flat Washer M10-D20 (#10) × 4

STEP 3
Fasten the pull-back lever arm (#1) to the base frame assembly (#4) with the listed hardware.

- HARDWARE**
 - Socket Head Cap Screw M10×25 (#7) × 2
 - Spring Washer M10 (#8) × 2
 - Flat Washer M10-D30 (#9) × 2

STEP 4
Install two rectangular foot pads (#6) on the front upright assembly (#5).

- HARDWARE**
 - Rectangular Foot Pad (#6) × 2

STEP 5
Install two rectangular foot pads (#6) on the base frame assembly (#4).

- HARDWARE**
 - Rectangular Foot Pad (#6) × 2

FINAL CHECK

- 01
- Check that the assembled machine is level and vertical. Use a spirit level to check that the guide rod is vertical in both directions. If it is not vertical, loosen the required frame hardware, realign the frame, and retighten the bolts.



Parts List

NO.	PART / SPECIFICATION	QTY	NO.	PART / SPECIFICATION	QTY	NO.	PART / SPECIFICATION	QTY	NO.	PART / SPECIFICATION	QTY
1	Pull-Back Lever Arm	1	4	Base Frame Assembly	1	7	Socket Head Cap Screw M10×25	6	10	Flat Washer M10-D20	4
2	Pull Handle Assembly	1	5	Front Upright Assembly	1	8	Spring Washer M10	6			
3	Socket Head Cap Screw M8×15	2	6	Rectangular Foot Pad	4	9	Flat Washer M10-D30	2			

Exploded View

